NESS D8/16 USER GUIDE

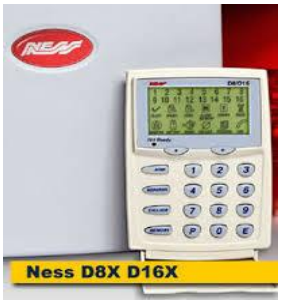

ARMING

- Ensure power is on and READY SYMBLE is on
- Press ARM then E button 3 beeps will sound

MONITOR ARMING

- This is used when the user is INSIDE the premise
- and wants protection around the perimeter.
- Close all protected windows and doors.
- Ensure power is on and READY symbol is on
- Press monitor then E (system arms with pre-programmed zones bypassed)
- 3 beeps will sound
- ARM symbol will come on

DISARMING

- Enter code then press E
- Armed symbol turns off

BYPASSING/ISOLATING

- When bypassing, the system must be in DISARMED state.
- Press Exclude E
- 3 beeps will sound (exclude symbol appears)
- Enter the zone you wish to bypass and then press E
- (i.e. zone 1 = 1E, zone 2 = 2E)
- Press E 3 beeps will sound
- This is a one off exclusion will reset after alarm is disarmed

VIEWING ALARM MEMORY

- press MEMORY then E 3 beeps will sound
- Press MEMORY button to scroll through log
- Press MEMORY E to get out of memory mode

CHANGING THE PIN CODE

- Press P followed by master code then E
- Press P 201 E
- Enter new code E, Enter new code E (number cant start with 0)
- Press P then E to exit

BEFORE LEAVING THE PROPERTY

secure all windows and doors confine pets to designated rooms by keeping doors shut

AT NIGHT

Keep windows and doors shut in rooms which are being protected by sensors confine pets to designated rooms

ENSURE

Sensors are not obstructed by furniture or suspended objects e.g.. Festive/party decorations detectors are free of insects and cobwebs

TAKE CARE

Protect sensors when decorating or doing building work. If you go away ensure that your key holders know how to switch your alarm off

HOW TO CANCEL FALSE ALARMS

Your password/voice code if security needs to verify an alarm. Inform Security of the dates you'll be away

Guardian Alarms
1300 765 987
info@guardianalarms.com.au